



## CHANGE DATE & TIME IN A TOSHIBA CIX40 SYSTEM

Programming must be performed on a Display phone when phone is idle (no calls incoming or on hold)  
The handset is to be left in the cradle while programming

### DATE Change

Press **HOLD \* # \* # 1\*2\*3\***  
Enter **0000**  
Press **HOLD**  
Enter **902**  
Press **HOLD**  
Press the **First button from the bottom right**  
Enter **Date** (YY MM DD)  
Press **HOLD, HOLD # # HOLD**

### TIME Change

Press **HOLD \* # \* # 1\*2\*3\***  
Enter **0000**  
Press **HOLD**  
Enter **902**  
Press **HOLD**  
Press the **Second button from the bottom right**  
Enter **Time** (24 hour format), Enter **seconds** (Example: 1130 00)  
Press **HOLD, HOLD # # HOLD**