

TORQUE RUSH PERFORMANCE

Phone: 204-298-0950

email: TorqueRush@shaw.ca

website: TorqueRush.com

D2A TPS Signal Converter(Analog or SENT protocol)

Terms of Use and Sale

Our products are intended for off road use only. Torque Rush Performance Inc. assumes no responsibility for vehicle damage, personal injury, breach of law or any expenses resultant from vehicle modification or use of these products. Any modifications from the original design of a vehicle are done at the user's own risk. Purchase or installation of any of these products constitutes acceptance of these terms by the purchaser or user.

Common Uses

In D to A mode the **D2A** can be used to decode a GM LT digital SENT protocol throttle position sensor signal and convert it to the corresponding dual 0-5V analog signals. The signals can be re-scaled and/or inverted as needed.

In A to D mode **D2A** can be used to convert a pair of analog throttle position sensor signals to a digital signal. The signals can be re-scaled and/or inverted as needed.

In A to A mode the **D2A** can be used to change the ranges and/or directions of analog TPS signals.

Installation

The **D2A** should be mounted where it will not be exposed to high temperatures.

Download and install the D2A PC app from <http://torquerush.com/downloads.html>

Connection to a PC for Programming/Logging/Firmware Updates

Remove the back cover from the D2A to access the USB connector. Connect with the supplied USB cable.

Wiring Connections:

V2/V3 Units: (one red wire)

Pink -- 5V out to throttle body

Black – ground/low ref from throttle position sensor wiring of ECU/TAC Module

* Light Green – digital(J2716 SENT) signal from throttle position sensor

* White – digital TPS signal out

Dark Green – TPS1 0-5V output signal

Purple – TPS2 0-5V output signal

Grey and Yellow wires – analog inputs from throttle body for A to D and A to A modes

Red – 5-12V supply. ***must be constant fused(2 amp) 12V for 1999-2007 GM full size V8 trucks(e.g. The PCM-B circuit) and LS1/LS6 cars.** Switched(key-on) fused 12V for other vehicles where the 5V reference of the OE throttle control system is not adequate to power external devices.

Blue – 5V sense - connects to 5V throttle reference from ECU/TAC module for systems using a constant 12V supply. (must be the Blue/Black wire for 2003-2007 GM trucks and Holden LS1 cars)

* These 2 wires may be folded back inside the wire loom. If using the D2A for a digital TPS application, the required wire may be swapped in the connector housing with one of the other wires that is not being used.

Mode

A to A is used if you simply want to re-scale an analog signal

D to A is used to convert the digital(SENT) signal from newer GM throttle bodies to the corresponding analog signals. No scaling is required if you only need to output the analog versions of the two encoded signals. Simply set the D2A in D to A mode.

A to D converts the 2 signals from an analog output throttle body to digital (SENT) signal compatible with newer GM ECUs.

Scaling can be applied to all modes.

The D2A should be re-booted after changes to the mode. Remove, then reconnect power from the device (including USB power).

Scaling the Outputs

The output signals can be re-scaled to simulate those of any 0-5V TPS signal throttle body. The signals can be scaled to move in the same or opposite directions(rising/falling). Each signal can have its own maximum, minimum and slope.

Method 1 - using the preset values if applicable to the application:

1. With the unit and vehicle powered up, key on/engine off, connect the USB cable between the **D2A** and your PC with the **D2A** app running on it.
2. Under “Select Emulation” select the vehicle/ECU type in which the **D2A** has been installed.
3. If available under “Connected TB Type,” select the new throttle body type you are using.
4. Click “Program Device” to program the values into the device.

Method 2(most accurate) – recording the actual output ranges of the throttle bodies:

1. With the unit and vehicle powered up, key on/engine off, connect the USB cable between the **D2A** and your PC with the **D2A** app running on it.
 2. Disable all scaling by clicking the “Undo” button.
 3. Under “Enter New Ranges” (Closed/Open) set the maximum and minimum sensor output values for the throttle body you wish to emulate. Typical values for some known applications are available from the “Select Emulation” drop down list. Otherwise, these should have been obtained in a similar manner as used for the new throttle body in step 4, by moving the blade of the original throttle body by hand to full closed and full open. These values cannot be obtained by using the pedal to actuate the throttle body.
 4. Under “Connected TB Type” select “Record Direct from TB”.
 5. If applicable, tick the appropriate check box(es) to program special features for the vehicle or input type.
 6. Click “Record” to capture the peak and minimum values for the digital throttle or analog throttle body by moving the blade by hand to the full closed and full open stops. (**Push it in both directions from its neutral position where the springs hold it).
- ****For the above mentioned Ford throttle bodies, you should move the blade slowly and smoothly as the D2A app also needs to capture data between the full open/full closed positions. Take 10 -15 seconds to move the blade from full closed to full open.
7. Click “Stop” then click the “Program” button to apply the new settings.
 8. Remove the USB cable and de-power, then re-power, the device to allow it to re-boot. You can simply unplug it if it is powered by constant 12V.

Use Existing

Tick this checkbox if you only wish to update the output(emulation) ranges from the **D2A**. Previously programmed input ranges from the replacement throttle body will not be overwritten. You will not need to record them again. Select “Custom” under “Select Emulation” and enter the desired values in the TPS1/TPS2/ Closed/Open text boxes. Then click “Program”.

Swap Analog Inputs

When using the preset values from the drop down list for connected throttle body types, depending on your input wiring, and if that throttle body type does not have identical ranges for both sensors, you may need to swap the ranges(Range = Peak - Min) that were populated for TPS1 and TPS2. The “Swap” button will swap the TPS1 values with the TPS2 values each time you click on it. This feature is not used when manually recording the ranges from the new throttle body.

Analog Sampling Rate

It is not likely that the default value of 10 kHz needs to be changed, but if needed for a particular throttle body type, the input sampling rate in A to A or A to D modes can be fine tuned.

Other PC App Buttons

Top Toolbar

“Update” will open the Firmware Update window.

“Find Device” will reset the connection to the D2A without closing an re-opening the app if there was a connection issue.

“DTC” will allow you to view or clear the stored fault record. The button will have a green background if there are no stored faults when the D2A is connected to the PC or when a Settings Report is requested. It will be red if the fault record is not empty.

“Settings” will retrieve the current settings of the D2A.

“Help” opens this document.

“Program” transfers the new input/output data to the D2A.

“Undo” clears all customized settings from the device. Output values will mirror the associated input values.

Chart Toolbar

Clicking the “Outputs Displayed/Inputs Displayed” button will toggle between which data is shown in the chart. Before any custom programming has been applied to the D2A, or after an “Undo”, inputs and outputs will be identical.

“Live” will stream data from the D2A to the app without recording the data.

“Record” will stream data with the option to save it to a log file.

“Stop” will end data recording or playback of a log file.

“Save' will open a save to file dialog for the current recording.

“Play” will give you the option to re-play the current recording or live view session, or to select a previously recorded log file for playback.

“Pause” allows you to pause and resume playback at any point and resume. Click “Stop” rather than “Resume” if you wish to end playback.

“Reset Chart” will clear all current data.

The min/max slider allows you to adjust the playback speed before or during playback.

Firmware Updates

If available, firmware updates may be installed to the **D2A** by the following procedure.

Download and install the current version of the D2A PC app from <http://torquerush.com/downloads.html>

For manual updates, download and save the latest firmware file from <http://torquerush.com/downloads.html>

Click the “Update” button in the top tool bar of the main window of the **D2A** PC app to open the Update window.

Disconnect the **D2A** from vehicle power. Remove the cover screws and cover from the **D2A** enclosure and connect it to your computer using an appropriate type A to B USB cable.

If your PC is currently connected to the internet, click on “Auto Update” to automatically install the most recent firmware or click “Manual Update” if you want to install a specific firmware file.

For manual updates, browse to and select the appropriate TRPD2A_V1.trp or TRPD2A_V2.trp firmware file. Then click the “Update” button to apply the firmware. All current D2A units are V2.

*You must use the current version of the PC app to access all functions of the current firmware.

LED Status Indicator (Firmware version 150)

When the device is running, the LED will be flashing at a fast rate. The LED should not be flashing when the ignition is off. Fault codes flash at a slower rate.

Blink fault codes:

Single Blink

1 single blink = D to A mode- loss of input signal

2 single blinks = A to D mode- loss of input signal(s)

3 single blinks = A to A mode- loss of input signal(s)

4 single blinks = A to D or A to A mode- TPS values outside of normal range

5 single blinks = D to A mode- digital throttle body reports a fault with one of the 2 sensors

6+ single blinks = Processor fault

Double blinks (Ford 4+2 type throttle bodies)

1 double blink = TPS1 input(yellow wire) outside of learned range


2 double blinks = TPS2 input(orange wire) outside of learned range

3 - 6 double blinks = Disagreement between TPS1 and TPS2 inputs base on the learned ranges.

*If in a fault state, correct the source of the error then de-power, then re-power the device to reboot it. This includes removing USB power.

2001-2002 GM Full Size V8 Truck Wiring

D2A to 2001-2002 GM Truck

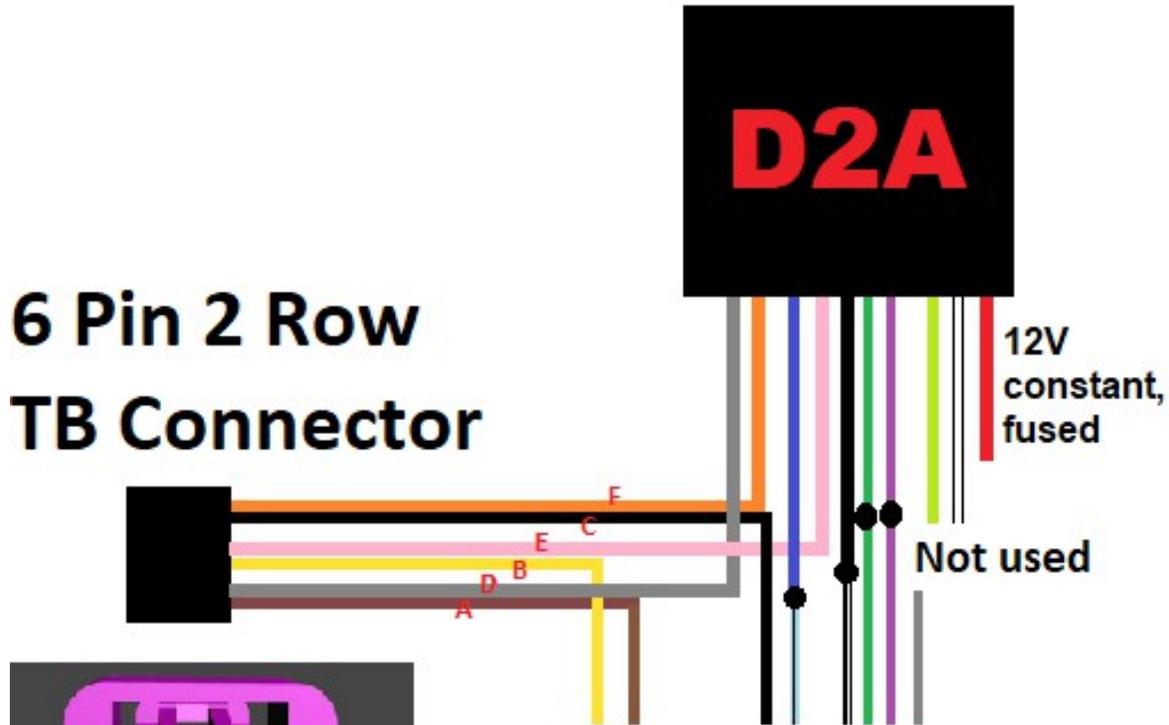

Factory Wiring To TAC Module


- A - Motor Control 2
- B - Motor Control 1
- C - Low Ref
- D - TPS1 signal
- E - 5V
- F - TPS2 signal

2003-2007 GM Full Size V8 Truck Wiring

D2A to 2003 - 2007 GM Truck /Holden LS1

Analog to Analog(re-scale) Mode

6 Pin 2 Row
TB Connector

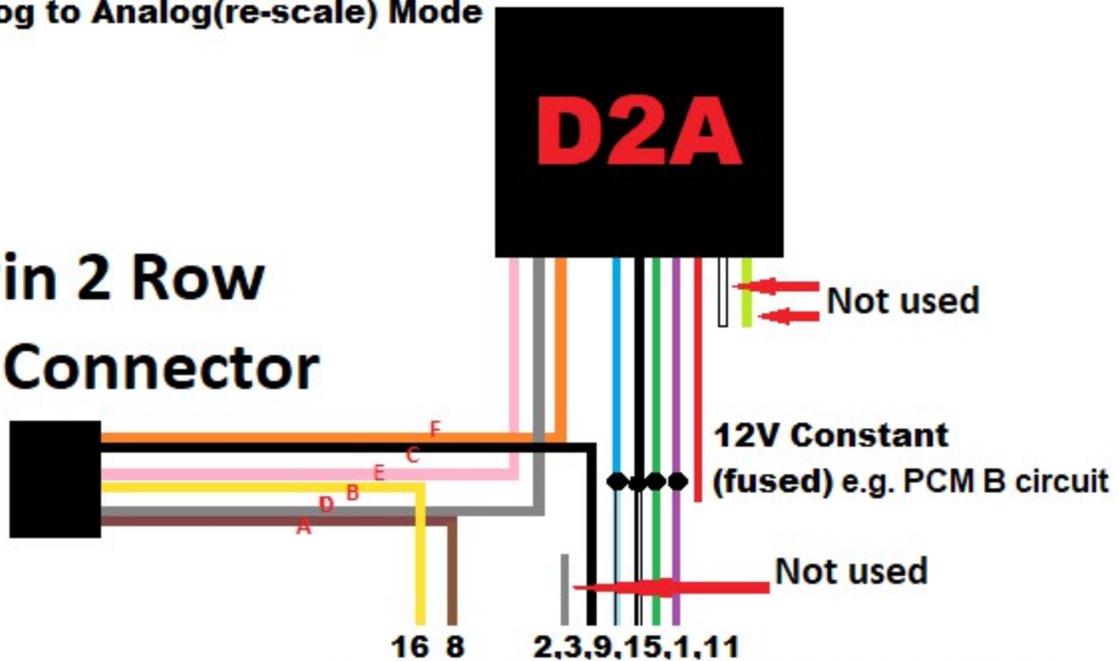

Factory throttle Body Wiring From TAC Module C1



- A - Motor Control 2**
- B - Motor Control 1**
- C - Low Ref**
- D - TPS1 signal**
- E - 5V**
- F - TPS2 signal**




LS1, LS6 North American Car Wiring

D2A to LS6

Analog to Analog(re-scale) Mode

6 Pin 2 Row
TB Connector

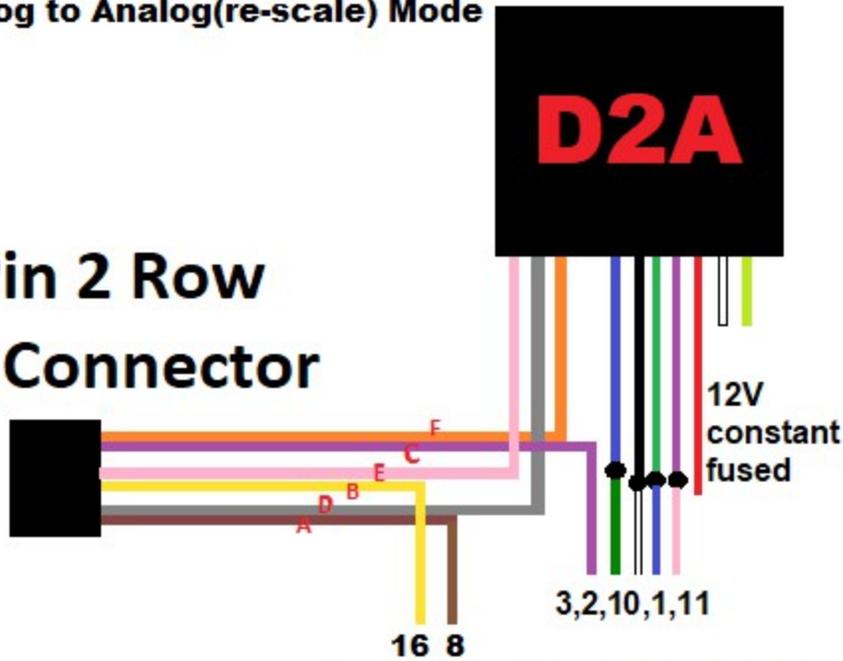

**Factory throttle Body Wiring
From TAC Module 16 Way Connector**



- A - Motor Control 2
- B - Motor Control 1
- C - Low Ref
- D - TPS1 signal
- E - 5V
- F - TPS2 signal

GM LT Digital Throttle Signal Decode

LT

